

NJ-14

Set-up Unit for P5102, P5201

- Setting of range, damping and limit values of comparators of P5201 and P5102 transmitters.
- Powered by connected transmitter.
- Indication of instant value measured by the transmitter.
- Control with three buttons.

 
Application

The set-up unit NJ-14 is used for setting of measuring range, sensor error correction, damping, sensor break indication (<3,6 mA or >21 mA), hysteresis, way of switching and comparator limits of P5201 and P5102 transmitters. The set-up unit can also display instant measured value.

Description


The set-up unit NJ-14 has a display and three push buttons on the front side. It also has a connection cable in the back, that is used for connection to the transmitter. The cable should be plugged into the transmitter connector. The set-up unit is powered by the connected transmitter.

Dimensional drawings

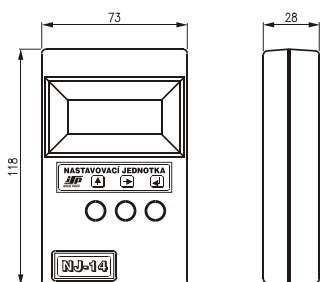

Electrical connection

 P5201 S1x, S2x Versions

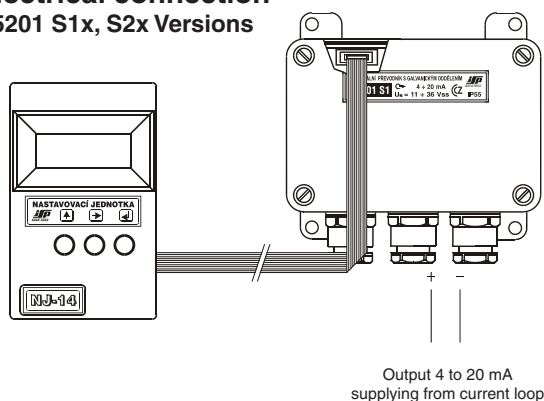

Technical specifications

Application:

Setting of range, damping values, hysteresis, way of switching and comparator limits of P5201 and P5102 transmitters

Display:

4-digit LCD with sign

Supplementary parameters

EMC (Electromagnetic compatibility):
according to EN 61326-1

Operation conditions

Operating temperature:

-10 to +55 °C

Humidity:

0 to 80 % rh (without condensation)

Elevation:

up to 2 000 m above sea level

Other parameters

Weight:

125 g

Housing:

IP 40

Materials:

case, buttons - cured polystyrene

Архангельск (8182)63-90-72

Астана +7(7172)727-132

Белгород (4722)40-23-64

Брянск (4832)59-03-52

Владивосток (423)249-28-31

Волгоград (844)278-03-48

Вологда (8172)26-41-59

Воронеж (473)204-51-73

Екатеринбург (343)384-55-89

Иваново (4932)77-34-06

Ижевск (3412)26-03-58

Казань (843)206-01-48

Калининград (4012)72-03-81

Калуга (4842)92-23-67

Кемерово (3842)65-04-62

Киров (8332)68-02-04

Краснодар (861)203-40-90

Красноярск (391)204-63-61

Курск (4712)77-13-04

Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13

Москва (495)268-04-70

Мурманск (8152)59-64-93

Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12

Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73

Орел (4862)44-53-42

Оренбург (3532)37-68-04

Пенза (8412)22-31-16

Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64

Самара (846)206-03-16

Санкт-Петербург (812)309-46-40

Саратов (845)249-38-78

Смоленск (4812)29-41-54

Сочи (862)225-72-31

Ставрополь (8652)20-65-13

Тверь (4822)63-31-35

Томск (3822)98-41-53

Тула (4872)74-02-29

Тюмень (3452)66-21-18

Ульяновск (8422)24-23-59

Уфа (347)229-48-12

 
Челябинск (351)202-03-61

Череповец (8202)49-02-64


Ярославль (4852)69-52-93

Electrical connection


Type P5201 L0x, L1x

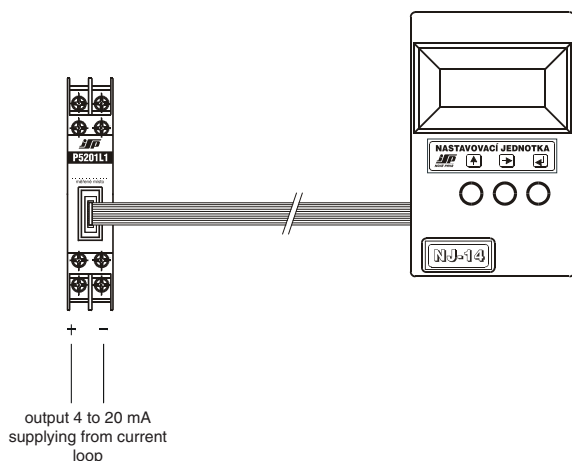


Type P5201 H1x; P5102 H1x

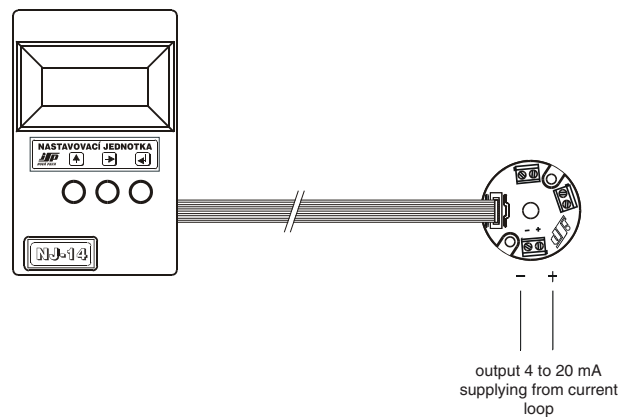 


Type P5201 L2x, L3x

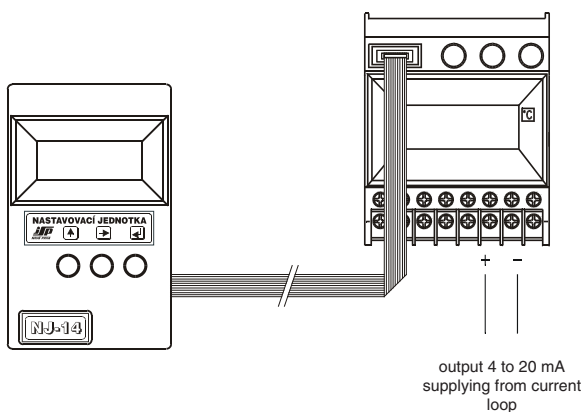 


Type P5102 L2x

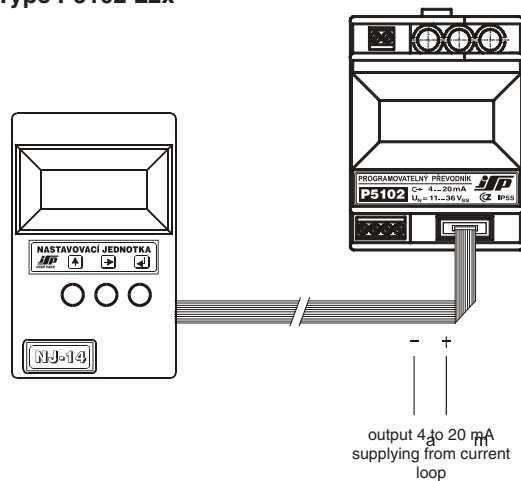 

Type P5102 S1x, P5102 S2x

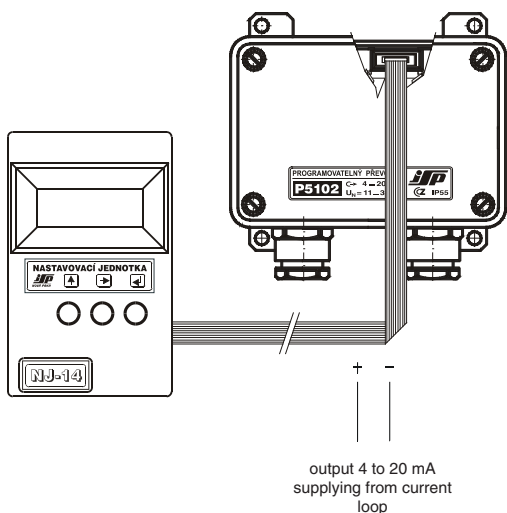 

Type P5102 L1x

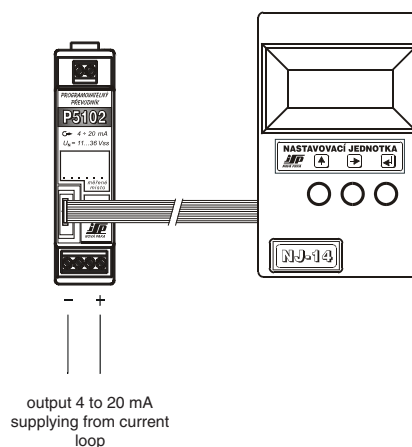 

Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93